CORDLESS ELECTRIC CHAIN SAW
АКУМУЛЯТОРНА ЦЕПНА ПИЛА

USER MANUAL
ІНСТРУКЦІЯ КОРИСТУВАЧА

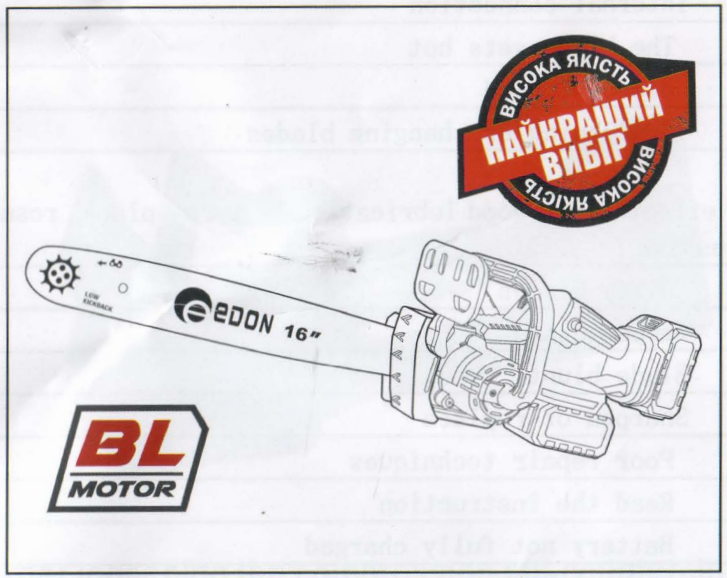

ACS-42-16BL OL

ISO9001 W

Important:read before using
Будь ласка, уважно прочитайте перед експлуатацією

Troubleshooting
Ask me
why the corrective action
unable to start
battery runs out of use
charging
battery not connected
connect battery
Open / Close Open Switch on/off Failure Delivery to the Service Centre for repair
intermittent operation
internal connection
The blade gets hot
Blade blunted
Sharpening or changing blades
Repair effect is not good lubrication is not in place, resulting in excessive
Dirty blades
clean chain
Blade blunt
Sharpen or replace
Poor repair techniques
Read the instruction
Battery not fully charged
Charge the battery
Unable to charge
Battery not properly placed in charger
Correct charge
Charger red light flashing battery charger incorrect
correct joint

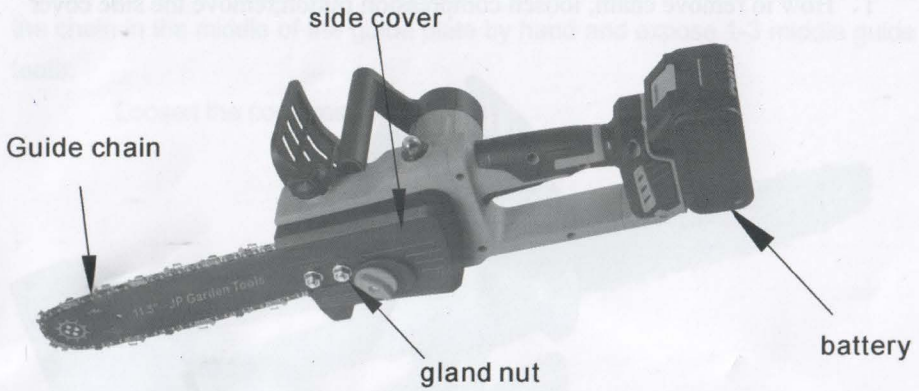

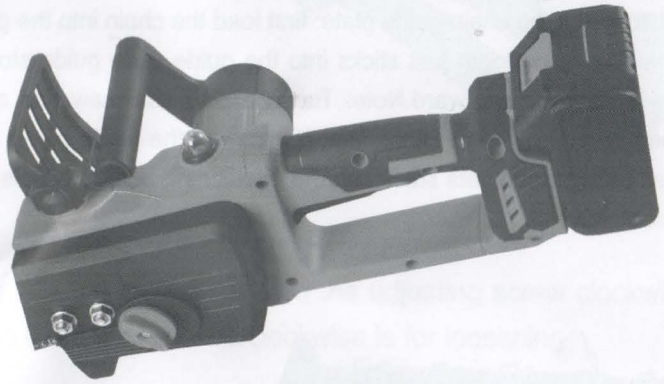

After loosening the compression nut counterclockwise, remove the compression cover (side cover).

1、How to remove chain, loosen compression button,remove the side cover

After remove the side cover as picture ,remove the guide directly

2、How to install the chain guide plate: first load the chain into the guide plate, and the middle guide tooth just sticks into the guide plate guide slot.Note: the chain blade should be forward.Note: The charging chainsaw has a device to adjust the tensioning of the chain. When installing the guide plate, make sure that the adjusting block gets stuck into the positioning adjusting hole at the end of the guide plate!

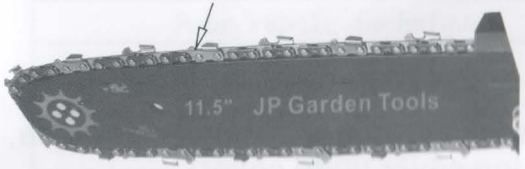

Put the chain into the guide plate

Note the direction of the cutting teeth

3. How to adjust the tightness of the chain? The adjustment standard is to lift the chain in the middle of the guide plate by hand and expose 1-3 middle guide teeth.

Loosen the compression nut

As shown in the picture, twisted the adjusting screw clockwise to tension the chain, counterclockwise is for loosening

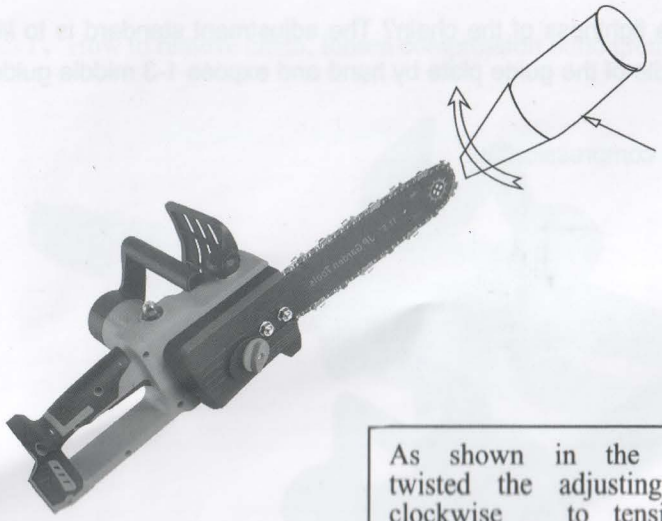

As shown in the picture, twisted the adjusting screw clockwise to tension the chain, counterclockwise is for loosening

4、

The chain tightness is shown as below

Note: 1-3 middle guide teeth are exposed in the pull-down chain

1. The new chain will be stretched in the early stage of use. Please check and adjust to the appropriate tension frequently,because the loose chain is easy to derail, which may lead to rapid wear of the chain and guide plate.

The chain must be stuck to the sprocket. After installation, please check it again.

drop-down chain

Pull down the chain

to expose the three middle guide teeth

Middle guide teeth

Specification

Brushless battery chain saw
6103-20V
11.5inches Lithium Chainsawwith brushless motor
3000rpm,
12in 3/8 China.

Align the pin hole and install the reverse hole and chain

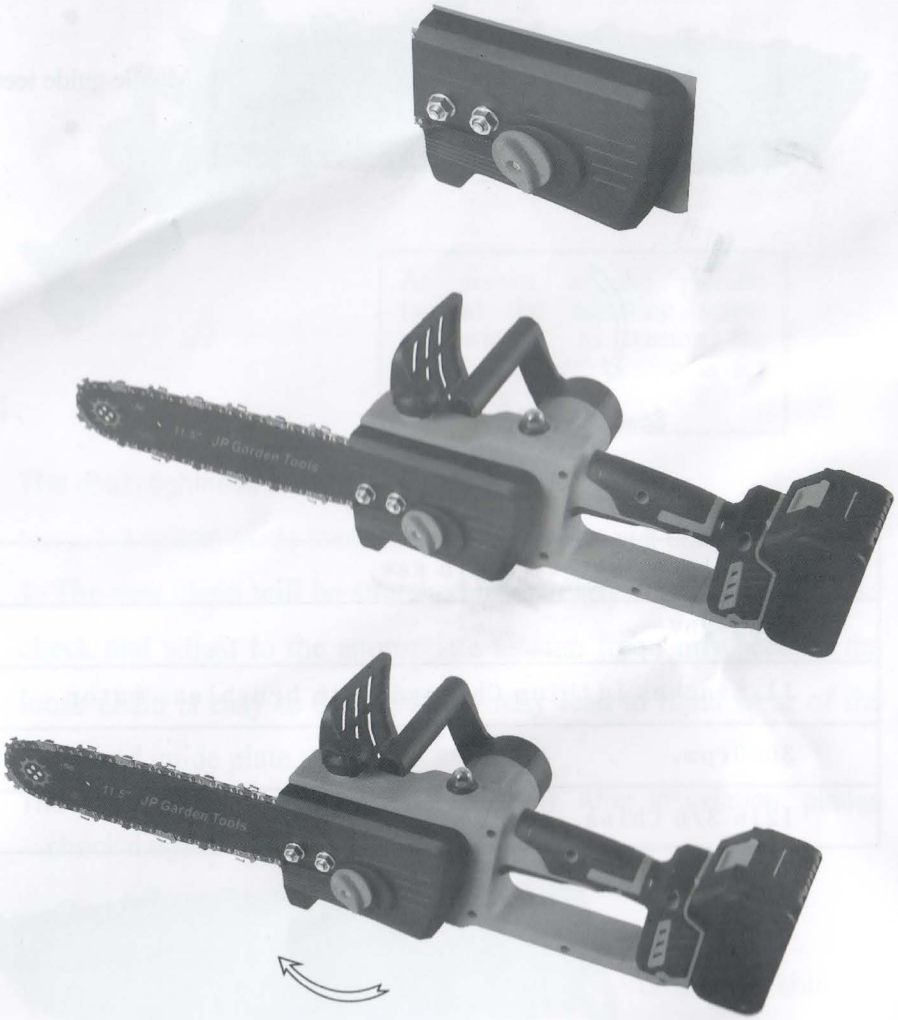

intall the side cover and tighten the screw nut

We reserve the right to improve specifications without prior notice.

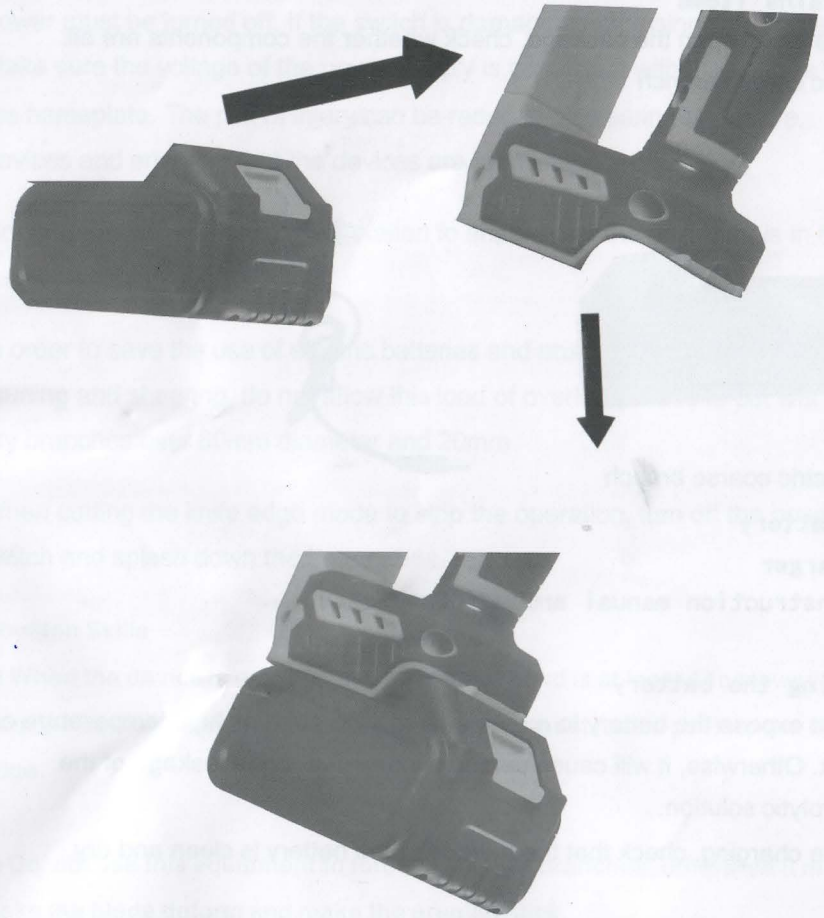

Battery Packing: Pay attention to aligning slots, inserts

Button press and pull out the battery pack

Extension rod control joint

Contains items

Say carefully open the package, check whether the components are all:

electric coarse branch

1) electric coarse branch

2) **Battery**

3) **Charger**

4) **instruction manual and warranty card**

Charing the battery

Do not expose the battery to extreme conditions such as high temperature or shock. Otherwise, it will cause personal injury due to the leakage of the electrolytic solution.

Before charging, check that the surface of the battery is clean and dry.

Before delivery, the battery of this product is not fully charged. Therefore, before the first use, it must be sufficient electricity.

Do not charge the battery for long periods of time, and do not run out of all the power in the soap tank, otherwise it will damage the battery

The Essential Security Department does not include failure due to incorrect use.

Please wear suitable clothing and work gloves when using this parent. Before each use, make sure the belt is running normally. start/off switch and safety switch must be available for normal use.When loosening the start switch, the power must be turned off. If the switch is damaged, stop using the device Make sure the voltage of the power supply is consistent with the voltage on the nameplate. The risk of injury can be reduced by wearing protective devices and ensuring that the devices are functioning properly.

Confirm the frequency of the operation to ensure that the operation is in the best condition.

In order to save the use of electric batteries and ensure the best service life of pruning and shearing, do not allow this load of overloaded lice to cut wet and dry branches over 60mm diameter and 20mm

When cutting the knife edge mode to stop the operation, turn off the power switch and splash down the battery box.

Houston Skills

1) When the device is running, say your other hand is at least 15cm away from the cutting area of the blade, and the hand must not be put into the knife edge.

2) Do not use this equipment to force the bigger branches, otherwise it may make the blade deform and make the pruning stick.

3) In cold or humid weather, to protect the battery pack, put it under waterproof clothing, do not use this equipment in rainy days.

4) We recommend that after daily use, the connection between the pruning number and the battery pack must be cut, and the power switchis closed

and put together into the matching tool box.

:) If the user feels the electricity is not enough or the cutting is not smooth enough, check if the electricity is exhausted or the blade is dull.

Cleaning and maintenance

Repair functions not mentioned herein shall be performed by the Service Centre.To ensure the safety of use, only the original parts can be used.

Repair work functions not mentioned in this specification are performed by the service center. To ensure safe use, only original parts can be used.

Please close the equipment before starting the chair repair. Clear the connection between the battery and the plant and store the battery in a safe package.

Wear hand care when touching safety blades.This can avoid sharp blade scratching the user. Follow-up cleaning and maintenance must be carried out regularly. This ensures long-term and reliable operation of the equipment.

maintenance

Clean the chain carefully after each use.Wipe the chain with lubricating oil and spray with metal protection spray

。

Clearness

Do not spray the equipment with water or break it into the water, otherwise, it may cause electric shock. Keep the ventilator, motor room and equipment handle clean. Use a damp cloth or brush cleaner.

Do not use a bay cleaner. Otherwise, it may cause permanent saka failure of the equipment. Please clean the blade carefully after each use.

Use oily cloth to wipe the blade and absorb the metal to protect the fog.

If the battery with sufficient electricity is significantly shorter, it must be replaced if the battery is exhausted.

the user can only use the battery pack manufactured by the original equipment operated by the customer center.

Always keep in mind applicable safety instructions and protection requirements and

environmental information

Put the charger in the room between +10 and +22M, and stops moisture entering.

1) Check that the switch is in off position.

2) Connect the charger to the corresponding connector for the battery pack

3) Make sure the power is consistent with the rated values on the charger and adapter

4) When the red light is on the charger, it indicates that the battery is charging, and the green light indicates that the charge is completed • the average charge time is 2 hours.

5)When charging is complete, drive the connector from the power source and then cut off the connector and battery connection.

6)The battery is used to ensure that it is recharged at least once every three months

Conditions of work

1. Maintain charging temperature 0-C-45-C for soap charger and battery pack, discharge temperature -1-CTC for battery pack **~60°C**

Operating Instructions

if need other spare parts, please use the original product, we can provide you with high quality parts.

battery

Empty pool charger

Engine - driven body Other accessories

Warranty clause

The warranty period of this product is 3 months, this clause does not include the following points:

Any natural wear and tear, overload work.

Damage caused by lack of routine maintenance and maintenance.

improper use and so on artificial damage.

Damage caused by improper transportation after living.

A product modified or dismantled by an illegal repairman

Force majeure factors such as natural disasters (fire, lightning, floods, etc.).

The car jammed the damage.

No warranty card was filled in at the time of purchase

Use non-original accessories and batteries.

To avoid unnecessary disputes, note:

we will charge the corresponding fee if we do not repair or change the attachment during the warranty period

After 8 hours of continuous operation, please remove the debris such as dust from the front turbulent cover plate of the equipment

Storage

1)To ensure that the battery is fully charged, avoid setting SS3S in extremely hot or cold environments.

2) If the equipment will not be used for a long time, please remove the battery before storage.

3)The batteries and chargers must be placed in the instrument box to prevent heat

■ dust and moisture from entering, check if the switch is off

4)Check the switch if close or not.

5) The battery should be stored in a dry environment under:

Short term less than 1 month storage temperature -20T-4-60X

Shortterm storage temperature less than 6 months -10 t ~+35" C

Recommended storage temperature (TC ~3(rc) for longer storage time

The distance between the battery and the combustible must be kept beyond 1.5m.

■ To ensure the service life of the equipment and prevent its degradation, store it in a fully charged state. When not in use, charge and discharge the 。

Do not turn on the power switch when storing.

Можливі несправності
При натисканні клавіші запуску пуск не відбувається - акумулятор не підключено
Підключіть акумулятор
Клавіша включення/вимкнення не працює або працює не стабільно
Зверніться до сервісного центру
Лезо нагрівається
Лезо затупилося - лезо слід заточити або замінити,
також слід перевірити як змащується цеп
пильне полотно може бути надто брудним і це перешкоджає змащенню
очистити пильне полотно
Акумулятор не повністю заряджений
Зарядіть акумулятор
Неможливо зарядити
Акумулятор неправильно вставлений у зарядний пристрій
Вставте акумулятор правильно

Після ослаблення компресійної гайки проти годинникової стрілки зніміть компресійну кришку (бічну кришку).

1、Як зняти ланцюг, послабити компресійну кнопку, зняти бічну кришку

Після зняття бічної кришки, як показано на малюнку, зніміть напрямну напрямну

2、Як встановити направляючу пластину ланцюга: спочатку завантажте ланцюг у направляючу пластину, попадіть в напрямний отвір направляючої пластини.

Вставте ланцюг у напрямну пластину

Зверніть увагу на напрямок ріжучих зубів

3、Як відрегулювати натяг ланцюга

Стандартне регулювання полягає в тому, щоб якщо підняти ланцюг посередині направляючої пластини рукою має бути видно 1-3 середніх напрямного зуба.

Щоб регулювати натяг цепу ослабте компресійну гайку як показано на малюнку, крутіть регулювальний гвинт за годинниковою стрілкою, щоб натягнути ланцюг, проти годинникової стрілки для ослаблення

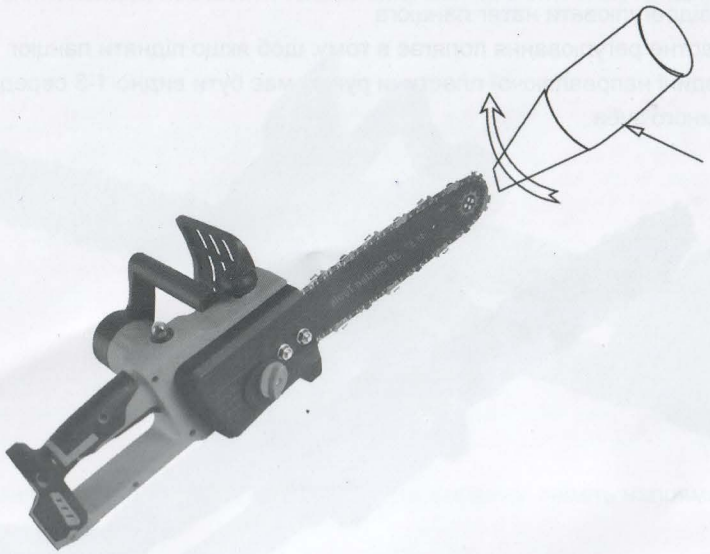

1. Новий ланцюг буде розтягуватися на ранній стадії використання.
Будь-ласка, часто перевіряйте та регулюйте відповідний натяг, оскільки ослаблений натяг ланцюга може призвести до швидкого зносу ланцюга та направляючої пластини.
Будь-ласка, часто перевіряйте та регулюйте відповідний натяг, оскільки ослаблений натяг ланцюга може призвести до швидкого зносу ланцюга та направляючої пластини.

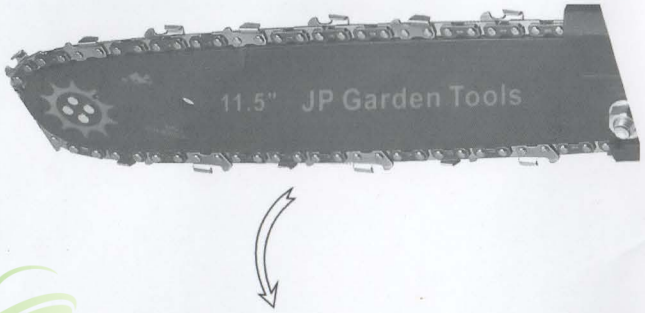

Правильний натяг цепу

Правильний натяг цепу

Безщіткова акумуляторна ланцюгова пила
6103-20B
11,5-дюймова літієва бензопила з безщітковим двигуном
3000 об/хв,
12 дюймів 3/8 шина.

Вирівняйте отвір для штифта та встановіть шину і ланцюг

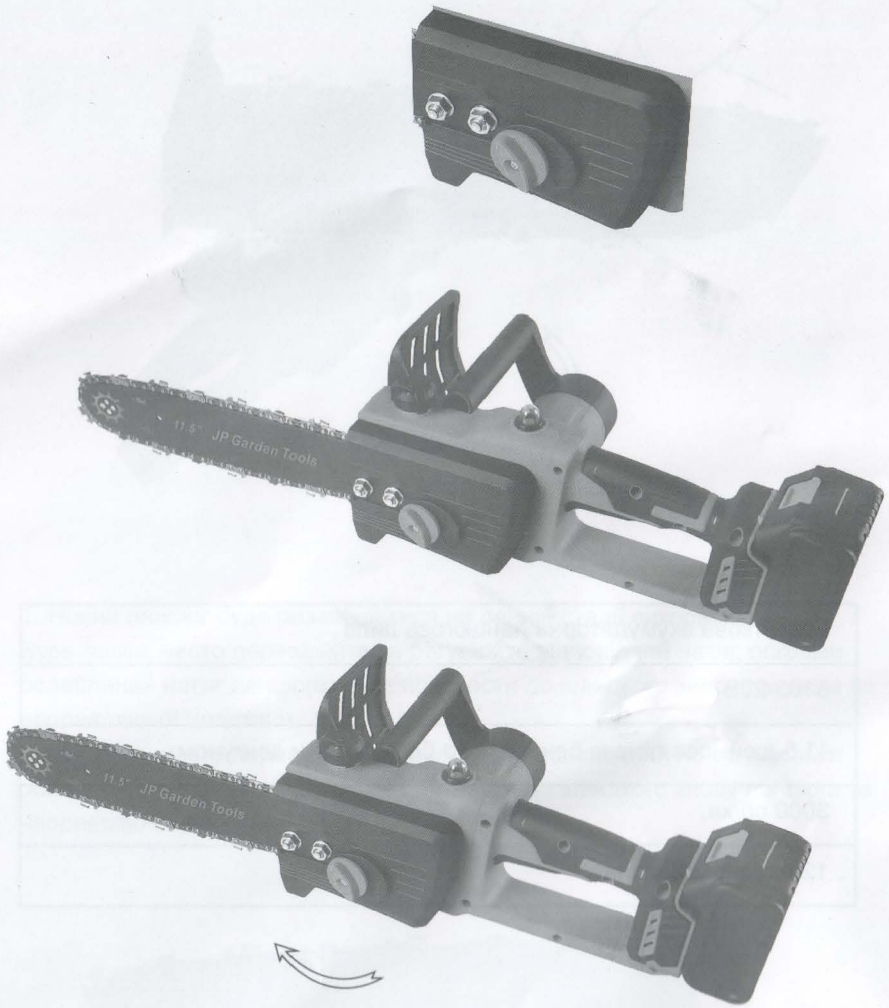

Вставте бічну кришку та затягніть гвинтову гайку

Ми залишаємо за собою право покращувати технічні характеристики без попереднього повідомлення

Акумуляторна батарея: Зверніть увагу на вирівнювання
Прорізи та пази мають співпадати
Натисніть кнопку та витягніть акумуляторну батарею

Містить елементи:
При покупці еревірте, чи всі компоненти є в наявносі :

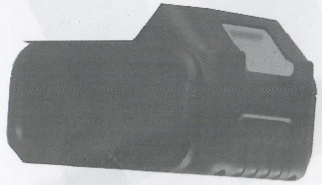

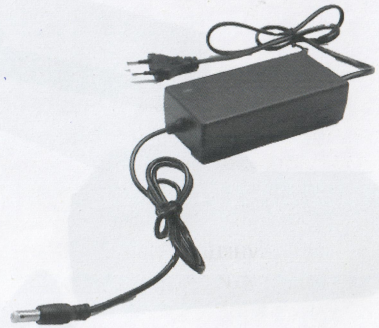

1) Пила
2) Акумулятор
3) Зарядний пристрій
4) інструкція з експлуатації та гарантійний талон

Заряджання акумулятора
Не піддавайте акумулятор впливу екстремальних умов, таких як висока температура або удари. Інакше це призведе до травм через витік електролітичного розчину.
Перед заряджанням переконайтеся, що поверхня акумулятора чиста та суха.
Перед заряджанням переконайтеся, що поверхня акумулятора чиста та суха.
Тому перед першим використанням має бути достатня кількість заряду (при потребі зарядити) .
Не заряджайте акумулятор протягом надто тривалого періоду часу і не вичерпуйте всю потужність з акумулятора під час користування

Під час використання цього інструменту надягайте відповідний одяг і робочі рукавички.
Перед кожним використанням переконайтеся, що інструмент працює нормально.
Вимикач і захисний вимикач повинні бути доступні для нормального використання.
При ослабленні пускового вимикача живлення має бути вимкнено. Якщо вимикач пошкоджено, припиніть використання пристрою
Переконайтеся, що напруга джерела живлення відповідає напрузі, зазначеній на заводській табличці.
Ризик травмування можна зменшити, одягнувши захисні пристрої та забезпечивши їх функціонування

Перевірте функціонування пили перед початком роботи .
Щоб заощадити використання електричних батарей і забезпечити найкращий термін служби акумулятора не допускайте перевантаження.
не зрізайте мокрих і сухих гілок діаметром понад 60 мм і 20 мм
Щоб зупинити роботу, вимкніть вимикач живлення та від єднайте акумуляторний блок.

Навики використання
1) Коли пристрій працює тримайте руки на ручках інструменту , або не ближче 15см від леза стежте щоб руки не потрапили до механізму . Цеп або інші рухомі частини можуть вас травмувати
2)Не використовуйте це обладнання лля пилання великих гі лок, і накше це може призвести до деформаці ї леза та змусити пилу заклинити.
3) У холодну або вологу погоду захищайте акумулятор від потрапляння вологи чи переохолодження
4) Ми рекомендуємо, щоб після використання інструменту ви від єднували акумулятор для подальшого зберігання

і складіть разом у відповідну коробку з інструментами.!)
Якщо користувач відчуває, що потужності недостатньо або різання не гладке: перевірте, чи не вичерпався заряд акумулятора або лезо не затупилося. В разі необхідності провести чищення та обслуговування Функції ремонту, не згадані в цьому документі, повинні виконуватися сервісом Centre.То забезпечення безпеки використання, можна використовувати лише оригінальні деталі.
Ремонтні роботи, не зазначені в цій специфікації, виконує сервісний центр. Щоб забезпечити безпечне використання, можна використовувати лише оригінальні деталі.

Функції ремонту, не згадані в цьому документі, повинні виконуватися спеціалізованим сервісним центром.
Для забезпечення безпеки використання, можна використовувати лише оригінальні деталі.

ВІд єднайте акумулятор з пили перед початком обслуговування. Очистіть з'єднання між акумулятором і установкою та зберігайте акумулятор у безпечному місці.
Будьте обережні з руками, коли торкаєтеся захисних лез.

Це дозволяє уникнути подряпин на гострому лезі користувача.
Подальша чистка і технічне обслуговування повинні проводитися регулярно. Це забезпечує тривалу і надійну роботу обладнання.

Обслуговування
Ретельно очищайте ланцюг після кожного використання.
Протріть ланцюг мастилом або захисним спреєм

Очищення

Уникайте потраплянню вологи в шнструмент, інакше це може призвести до ураження електричним струмом чи поломки інструменту.
Тримайте механізми та ручку обладнання в чистоті.
Використовуйте вологу ганчірку або засіб для чищення (щітки). В іншому випадку це може призвести до незворотного виходу обладнання з ладу.
Будь ласка, обережно очищайте лезо після кожного використання.
Використовуйте промаслену тканину для цього.

стежте щоб руки не потрапили до механізму . Цеп або інші рухомі частини можуть вас травмувати
Користувач може використовувати лише акумуляторну батарею, виготовлену на оригінальному обладнанні, що експлуатується центром обслуговування клієнтів.

Завжди пам'ятайте про застосовні інструкції з техніки безпеки та захисні вимоги.

Для правильного заряджання акумуляторів поставте зарядний пристрій в кімнаті з температурою +10 і +22 . Переконайтеся що немає потрапляння вологи.

1) Переконайтеся, що перемикач знаходиться у вимкненому положенні.
2) Підключіть зарядний пристрій до відповідного джерела живлення
3) Переконайтеся, що потужність відповідає номінальним значенням на зарядному пристрої та адаптері
4) Коли на зарядному пристрої горить червоне світло, це означає, що акумулятор заряджається, а зелене світло вказує на те, що зарядка завершена · Середній час зарядки становить 2 години.
5) Після завершення заряджання від'єднайте роз'єм від джерела живлення, а потім від'єнайте роз'єм і з'єднання акумулятора.
6) Акумулятор потрібно заряджати принаймні раз на три місяці

Умови роботи
1. Підтримуйте температуру заряджання у вказаному діапазоні

Інструкція з експлуатації

Якщо Вам потрібні розхідні матеріали (ланцюги, шини) , акумулятори, інші запасні частини, будь-ласка, використовуйте оригінальний продукт. Ви можете звернутися до дилллерів або сервісних центрів

Гарантійні умови
Гарантійний термін даного товару становить 1 рік
До гарантійних випадків ремонту не відносять :
Будь-які природні зноси
Пошкодження, спричинені відсутністю регулярного технічного обслуговування (очистка , змащення тощо)
Використанням інструменту не за призначенням
Механічні пошкодження. Перенавантаження інструменту

Після кожних 8 годин безперервної роботи , будь ласка , ретельно видаліть сміття, таке як пил, та тирса з механізму пили

Зберігання

1) Не заряджайте акумулятори при високій або низькій температурі навколишнього середовища для правильного та безпечного заряджання

2) Якщо пила не буде використовуватися протягом тривалого часу, вийміть батарею перед зберіганням.

3) Уникайте потраплянню пилу та вологи на акумулятори та зарядний пристрій

4) Перевірте,чи переведено клавішу запуску в положення вимкнено

5) Акумулятор слід зберігати в сухому середовищі . Не піддавайте акумулятор впливу високої температури +40 і вижче . Не піддавайте акумулятори тривалому впливу низької температури. Перед тривалим зберіганням акумулятор слід повністю зарядити. Не менеше ніж один раз на місяць акумулятор слід розряджати і заряджати